


NOTE: WHEN ORDERING PARTS, FURNISH THE FOLLOWING INFORMATION:
 1. BULLETIN NUMBER, NEMA SIZE, & SERIAL NUMBER FROM NAMEPLATE
 2. PART NUMBER & DESCRIPTION

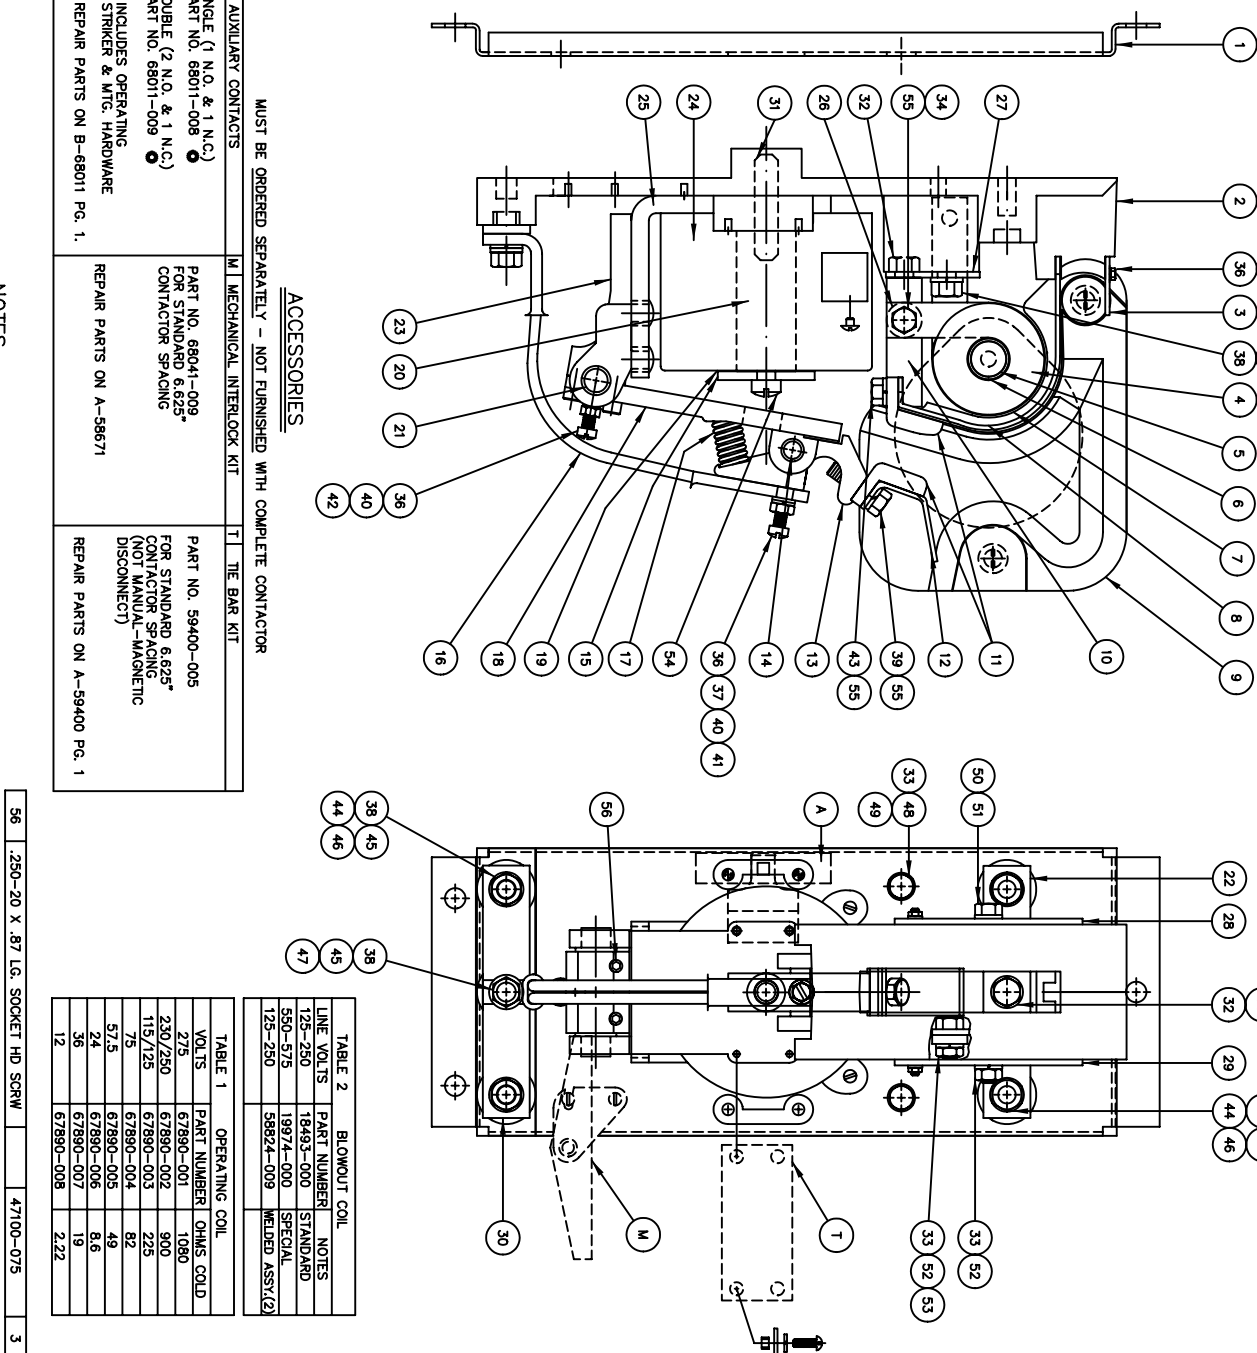

ACCESSORIES

MUST BE ORDERED SEPARATELY - NOT FURNISHED WITH COMPLETE CONTACTOR

A AUXILIARY CONTACTS	M MECHANICAL INTERLOCK KIT	T THE BAR KIT
SINGLE (1 N.O. & 1 N.C.) PART NO. 68011-008	PART NO. 68041-009 FOR STANDARD 6.825" CONTACTOR SPACING	PART NO. 59400-005 FOR STANDARD 6.625" CONTACTOR SPACING (NOT MANUAL-MAGNETIC DISCONNECT)
DOUBLE (2 N.O. & 1 N.C.) PART NO. 68011-009	REPAIR PARTS ON A-58671	REPAIR PARTS ON A-59400 PG. 1
INCLUDES OPERATING STRIKER & MFG. HARDWARE		
REPAIR PARTS ON B-68011 PG. 1.		

NOTES

- COMPLETE CONTACTOR AVAILABLE WITHOUT MOUNTING PAN.
- ITEM 4 (TABLE 2) WELDED BLOWOUT COIL ASSEMBLY INCLUDES ITEMS 4, 10, 22, 26, 33, 34, 52 & 53.
- INCLUDES HINGE BEARINGS
- INCLUDES SUPPORT BOSS

VOLTS	PART NUMBER	OHMS	COLD
275	67890-001	1080	
230/250	67890-002	900	
115/125	67890-003	225	
75	67890-004	62	
57.5	67890-005	49	
24	67890-006	8.6	
36	67890-007	19	
12	67890-008	2.22	

LINE VOLTS	PART NUMBER	NOTES
125-250	18493-000	STANDARD
550-575	19974-000	SPECIAL
125-250	58824-009	WELDED ASSY.(2)

56	250-20 X .87 LG. SOCKET HD SCREW	47100-075	3
----	----------------------------------	-----------	---

ITEM	DESCRIPTION	NOTES	PART NO.	QTY.
1	MOUNTING PAN	(1)	68038-000	1
2	BASE		68022-001	1
3	ARC SHIELD RETAINER		59653-100	1
4	BLOWOUT COIL	(2)	SEE TABLE 2	1
5	D.C. BLOWOUT CORE (SOLID)		66870-035	1
6	A.C. BLOWOUT CORE (SLOTTED)		18601-000	1
7	BLOWOUT INSULATING TUBE		18603-000	2
8	BLOWOUT GUARD		18063-000	1
9	ARC SHIELD ASSEMBLY		18063-000	1
10	STATIONARY CONTACT SUPPORT		58718-000	1
11	CONTACT TIP (COPPER)		18402-000	2
11	CONTACT TIP (SILVER FACED)		18402-001	2
12	CONTACT TIP (SILVER TUNGSTEN CARBIDE FACED)		18402-004	2
13	ARC TRANSFER TIP		59465-000	1
14	MOVING CONTACT HOLDER		59465-001	1
14	CONTACT HINGE PIN		59462-000	1
15	CORE CAP		19657-000	1
16	SHUNT		68027-001	1
17	CONTACT SPRING		67981-014	1
18	ARMATURE ASSEMBLY	(3)	59454-001	1
19	NON MAGNETIC SPACER		59545-000	1
20	COIL CORE		58720-001	1
21	ARMATURE HINGE PIN		59463-000	1
22	UPPER TERMINAL ASSEMBLY		68026-000	1
23	ARMATURE STOP		59457-001	1
24	OPERATING COIL	(3)	SEE TABLE 1	1
25	STATOR ASSEMBLY		59459-000	1
26	SPACER - BLOWOUT COIL		18602-000	1
27	SUPPORT MOUNTING BRACKET		68023-000	1
28	FLUX PLATE ASSEMBLY - LEFT HAND	(4)	18061-000	1
29	FLUX PLATE ASSEMBLY - RIGHT HAND	(4)	18062-000	1
30	LOWER CONNECTING BUS		68024-000	1
31	.500-13 X 1.93 STUD		66475-021	1
32	.375-16 X .75 HEX HEAD SCREW		47246-102	3
33	.312 SPLIT LOCKWASHER		47252-039	3
34	.312-18 X 1.50 STAINLESS STEEL SCREW		47779-083	1
35	.250-20 X 1.50 HEX HEAD SCREW		47246-069	1
36	.250 SPLIT LOCKWASHER		47252-038	3
37	.250 FLAT WASHER		47250-511	1
38	.375 SPLIT LOCKWASHER		47252-040	7
39	.312-18 X 1.00 SS HEX HEAD SCREW		47779-081	1
40	.250-20 NUT		47253-021	2
41	.250-20 X 1.90 SLOTTED HEAD FLUSTER SCREW		47244-155	1
42	.250-20 X .87 SLOTTED HEAD FLUSTER SCREW		47244-149	1
43	.312-18 X .75 SS. HEX HEAD SCREW		47779-079	1
44	.375-16 X 1.25 HEX HEAD SCREW		47246-104	4
45	.375 WASHER		47250-020	6
46	.375-16 NUT		47253-503	4
47	.375-16 X 1 HEX HEAD SCREW		47246-103	1
48	.312-18 X 1 HEX HEAD SCREW		47246-081	3
49	.312 WASHER		47250-505	3
50	.312-18 X 3.50 HEX HEAD SCREW		47246-101	1
51	.312 INTERNAL STAR LOCK WASHER		47304-010	1
52	.312-18 NUT		47253-602	2
53	.312-18 X .75 HEX HEAD SCREW		47246-079	1
54	.375-16 X .75 SLOTTED FLUSTER HEAD SCREW		48624-334	1
55	.312 S.S. SPLIT LOCKWASHER		47252-339	3

E 5-3-00 TLU	ISS. 53 & 58 WORK. CRT. & ADDED ITEM 55	LINEAR	DATE 3-3-87	DR. FB/JLM	OK.	REF.
D 5-26-99 TLU	ITEM 21/PAN WAS WORKING AT 59454-000	LINEAR	DATE 5-26-99			
C 9-30-96 TLU	ECN 5210-185	LINEAR	DATE 9-30-96			
B 5-8-91 B.S.	ECN 5210-109	LINEAR	DATE 5-8-91			
A 4-16-91 B.S.	ECN 5210-113	LINEAR	DATE 4-16-91			

K						
J						
I						
H						
G						
F	5-24-00 KR	AUX #68011 WAS 68040				

P						
O						
N						
M						
L						
K						
J						
I						
H						
G						
F						
E						
D						
C						
B						
A						