


ITEM	DESCRIPTION	PART NO.	QTY.
1	BASE ASSEMBLY	58868-002	1
2			
3	STATOR ASSEMBLY	19795-000	1
4	ARMATURE ASSEMBLY	19797-002	1
5	ARMATURE HINGE PIN	58843-001	1
6	#10-24 X .62 LG. PAN HEAD SCREW	49137-076	1
7			
8	SPRING ADJUSTMENT SCREW	42899-000	1
9			
10			
11	.312-24 HEX NUT	47253-204	1
12			
13	CONTACT HOLDER ARM	16927-000	1
14	CONTACT TIP	17279-000	2
15	ARC HORN	68056-001	1
16	.250 SPLIT LG. HEX HEAD SCREW	47252-038	4
17	FINGER SPRING	16960-000	1
18	MOVABLE CONTACT HINGE PIN	16960-000	1
19	FINGER SPRING	16960-000	1
20	FINGER SHUNT CONTACT HINGE PIN	17406-000	1
21			
22	.250-20 X 1.00 LG. FILLISTER HEAD SCREW	47244-150	1
23			
24	.250-20 HEX NUT	47253-021	1
25	OPERATING COIL CORE	58672-001	1
26	OPERATING COIL	SEE TABLE	
27	OPERATING CORE CAP	42840-000	1
28	.312-18 X .75 FILLISTER HEAD SCREW	48624-307	1
29	OPERATING SPRING	19257-000	1
30	LOCKOUT COIL CORE	57558-004	1
31			
32	.312 BRASS FLAT WASHER	47251-012	6
33	.312-18 BRASS HEX NUT	47254-013	6
34			
35	.312-18 X 1.75 LG. BRASS STUD	57438-042	2
36			
37	14 GA. Q1-1251 WIRE 6.00 LONG	821-141-06-14	1
38	BLOWOUT COIL MOUNTING BASE	58667-001	1
39	STATIONARY CONTACT BRACKET	58665-002	1
40	BLOWOUT COIL - 230V 58860-002	SEE TABLE	
41	BLOWOUT COIL - 550V 58860-003	SEE TABLE	
42	BLOWOUT COIL SPACER	16971-000	1
43	BLOWOUT GUARD	17343-000	1
44	BLOWOUT CORE INSULATOR	66870-034	1
45	BLOWOUT COIL INSULATING WASHER	17351-000	1
46	L.H. FLUX PLATE ASSEMBLY	16961-000	2
47	R.H. FLUX PLATE ASSEMBLY	16964-000	1
48	TERMINAL	58861-001	1
49	.250-20 X 1.00 LG. S.S. HEX HEAD SCREW	47278-066	2
50	.250-20 X 2.75 LG. HEX HEAD SCREW	47246-094	1
51	.312-18 X .75 LG. HEX HEAD SCREW	47246-079	1
52	.250-20 HEX NUT	47253-601	2
53	.250 FLAT WASHER	47250-502	4
54	.312 INTERNAL TOOTH LOCK WASHER	47304-010	4
55	STANDOFF SPACER	57960-000	2
56	.250-20 BRASS HEX NUT	47254-011	1
57	.250 EXTERNAL TOOTH LOCK WASHER	47303-008	3

NOTE: WHEN ORDERING REPAIR PARTS BE SURE TO FURNISH SERIAL NUMBER & PART NUMBER WHICH ARE LOCATED ON NAME PLATE. ALSO PART NAME & PART NUMBER.

ITEM	DESCRIPTION	PART NO.	QTY.
58	.250-20 X 2.00 LG. HEX HEAD SCREW	47246-071	2
59	ARC SHIELD ASSEMBLY	16993-000	1
60			
61	AUXILIARY CONTACT ASSEMBLY	SEE TABLE	
62	.250 S.S. SPLIT LOCK WASHER	47252-238	3
63	.312 FLAT WASHER	47250-505	1
64	ARC SHIELD RETAINER	68323-001	1
65	SPADE TERMINAL #8	57513-066	1

NOTE: USE THIS RPC AFTER NOVEMBER 2000, SEE RPC-58868-2 BEFORE NOVEMBER 2000

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N	COIL P/N
A	230/250V	68091-001	58860-002
B	115/125V	68091-002	58860-002
C	230/250V	68091-001	58860-003
D	115/125V	68091-002	58860-003

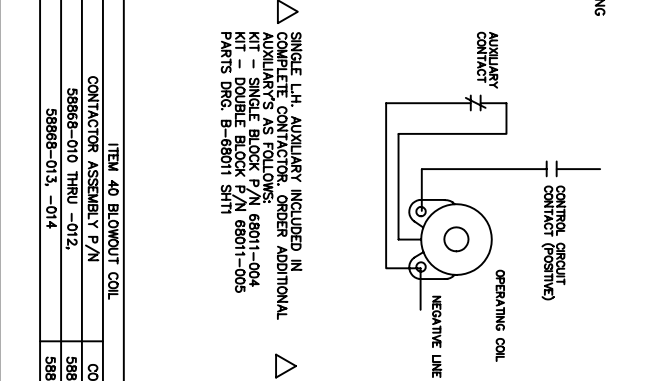

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N	COIL P/N
A	230/250V	68091-001	58860-002
B	115/125V	68091-002	58860-002
C	230/250V	68091-001	58860-003
D	115/125V	68091-002	58860-003

SINGLE L.H. AUXILIARY INCLUDED IN COMPLETE CONTACTOR ORDER ADDITIONAL AUXILIARY'S AS FOLLOWS:
 KIT - SINGLE BLOCK P/N 68011-004
 KIT - DOUBLE BLOCK P/N 68011-005
 PARTS DRG. B-68011 SH11

ITEM	AUXILIARY P/N	QTY.
1	68011-004	1
2	68011-005	2

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002

ITEM	OPERATING COIL
A	68091-001
B	68091-002
C	68091-001
D	68091-002

ITEM	OPERATING VOLTAGE	OPERATING COIL P/N
A	230/250V	68091-001
B	115/125V	68091-002
C	230/250V	68091-001
D	115/125V	68091-002